



# **Lead-free SMT**

## **Considerations in Developing a Reliable Soldering Process**

**Author: Peter Biocca, Senior Development Engineer, Kester, Des Plaines, Illinois**  
**Telephone 972.390.1197; email [pbiocca@kester.com](mailto:pbiocca@kester.com)**

**January 15<sup>th</sup>, 2005**

## Lead-free SMT – Considerations in Developing a Reliable Soldering Process


Lead-free SMT can be achieved reliably if several process requirements are implemented carefully but a solid understanding of the changes, which will occur during the lead-free transition, is needed. The most common alloys used in lead-free SMT today are tin-silver-copper alloys; these alloys all have a melting range between 217-220°C; these alloys melt at higher temperatures than traditional leaded solders but also have different physical; and chemical characteristics.

### Key transition considerations in Pb-free SMT reflow

- ❑ **Melting temperature of alloy**
- ❑ **Flux chemistry - activation, temperature effects**
- ❑ **Wetting and surface tension properties of the alloy**
- ❑ **Solder balling and bridging potential increases**
- ❑ **Component / board process compatibility**
- ❑ **Compatible rework / repair**
- ❑ **Compatible wave, selective soldering processes**
- ❑ **Quality inspection criteria modifications**
- ❑ **Cosmetic effects of flux at higher reflow temperatures**
- ❑ **Nitrogen versus air reflow**
- ❑ **Pin-testability of flux residues**
- ❑ **Solder voids impact**
- ❑ **Residue cleaning / removal process changes**
- ❑ **Conformal coating and under fill compatibility**
- ❑ **Oven process capability, maintenance, flux decomposition volumes**

Typically the peak temperature range for tin-silver copper alloys will be between 235- 245°C. If the boards have small thermal masses and the oven has sufficient heating zones, peak temperatures as low as 229°C have been used. In most cases low peak temperatures will require extended times above the liquidus temperature of the alloy.

With hotter preheats and higher peak temperatures, the classification of non-hermetic solid-

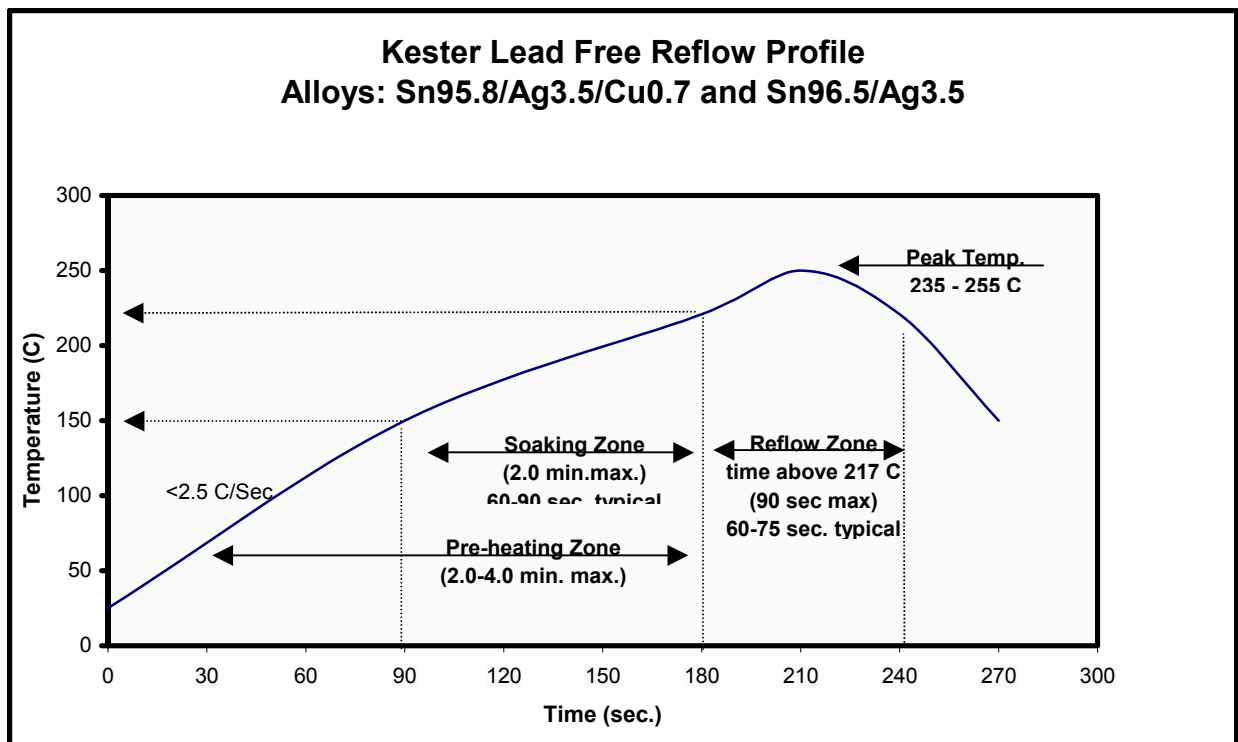

state SMD components may change. Moisture pick-up can further aggravate component reliability with lead-free reflow soldering. Internal delamination, cracks, bond lifting, die lifting and in extreme cases pop-corning effects can occur.

The IPC/JEDEC J-STD-020 specifies the new reflow requirements for small to very large bodied components.

It is summarized in the following table.

### Lead-free Temperature Profile for MSL Classification

| Thermal Profile Features               | Small devices                                | Large Devices      | Very Large Devices |
|--|--|--------------------|--------------------|
| <b>PREHEAT</b>                         |  |                    |                    |
| Ramp-up rate to 150 °C                 | Minimum 3 K/Sec Average value over 10 sec.   |                    |                    |
| Time From 190-200 °C                   | Minimum 110 seconds                          |                    |                    |
| <b>PEAK</b>                            |  |                    |                    |
| Ramp-up rate From 200° C to Peak temp. | 0.5 K/sec, average value over 10 seconds     |                    |                    |
| Time above Liquidus 217 °C             | Minimum 90 seconds                           |                    |                    |
| Peak Temperature                       | 260 °C                                       | 250° C             | 245° C             |
| Time above Peak temp.                  | Minimum 40 seconds                           | Minimum 30 seconds | Minimum 30 seconds |
| <b>COOLING</b>                         |  |                    |                    |
| Ramp down from Solidus Temp. 217 °C    | Minimum 6 K/seconds, average over 10 seconds |                    |                    |
| <b>General info</b>                    |  |                    |                    |
| Time 25°C TO Peak                      | Minimum 300 seconds                          |                    |                    |


**Thickness/volume: Small components 350 mm<sup>3</sup> or less, large 350-2000, very large 2000 mm<sup>3</sup> or more.**

Higher reflow thermal issues can range from increased paste slump, charring of the residues, to premature de-activation of the flux and increased oxidation rates, especially if air reflow is used. Good solder paste manufacturers are using resins and gelling agents, which offer good hot slump resistance and good activators which are stable at higher preheats and higher peak reflow temperatures.

Innovations in lead-free flux chemistries are required and these are listed below.

- ❑ **New activator packages, higher activation temperatures**
- ❑ **New resins, low decomposition rates**
- ❑ **New thermally stable gelling agents, reduced slump**
- ❑ **Better surfactants, enhancing the wetting of solder**
- ❑ **Additives to prevent oxidation at higher temperatures**
- ❑ **Alloy specific fluxes, designed for SAC, SnBi, SnZn or other alloys**

Below are photographs of two lead-free solder pastes after hot slump testing at 185° C. Paste A has gelling agents incorporated within its flux system that do not prevent slumping. Paste B contains gelling agents, which prevent slumping at higher preheat temperatures; this paste will reduce the incidence of bridging, solder balls and mid-chip balling.

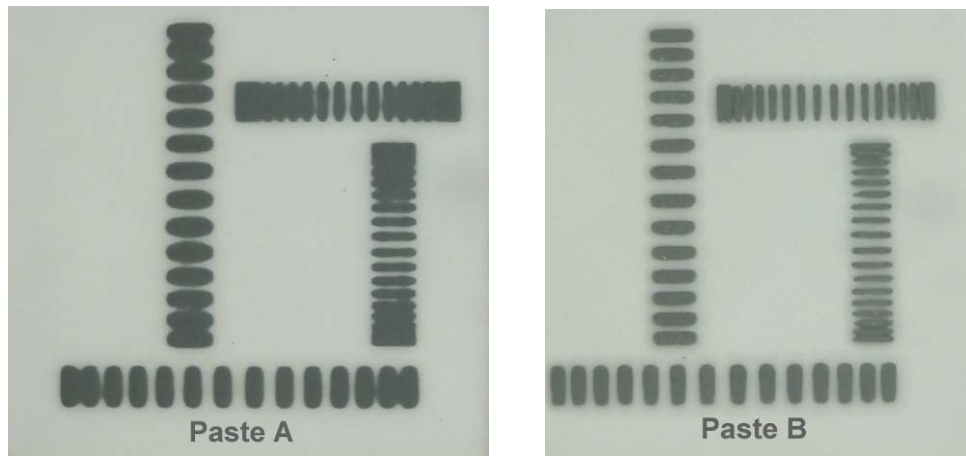


Solder pastes printed on inert ceramic and preheated at 185°C in air

No-clean solder pastes are used by the vast majority of assemblers, about 90% of assemblers, and most use air reflow. A no-clean SMT process requires careful selection of finishes to be soldered but also careful selection of a paste's attributes. Some lead-free no-clean pastes are designed to solder adequately a variety of metal finishes; others have difficulty with second pass bare copper boards due to their lower activity. Some no-clean pastes require lower peak temperatures and others can withstand higher temperatures without slumping, charring or the polymerization of the resins. For those using water washable solder pastes, the activity will be favorable to the reduced wetting normally exhibited with lead-free solders.


Nitrogen will impact solder joint cosmetics as seen in the photographs below. Solder paste reflow in nitrogen will offer brighter and more uniform solder joint surfaces. Nitrogen reflow also will enhance wetting with lead-free solders, especially on bare copper OSP surfaces. It must be noted that the vast majority of assemblers seek a solder paste that can be reflowed in air; so many lead-free paste chemistries are being developed with this in mind.

The test below was achieved by printing lead-free solder paste on a white ceramic substrate then reflowing one in air the other in nitrogen. Although the surfaces look different, this is only a surface condition and reliability is not impacted.

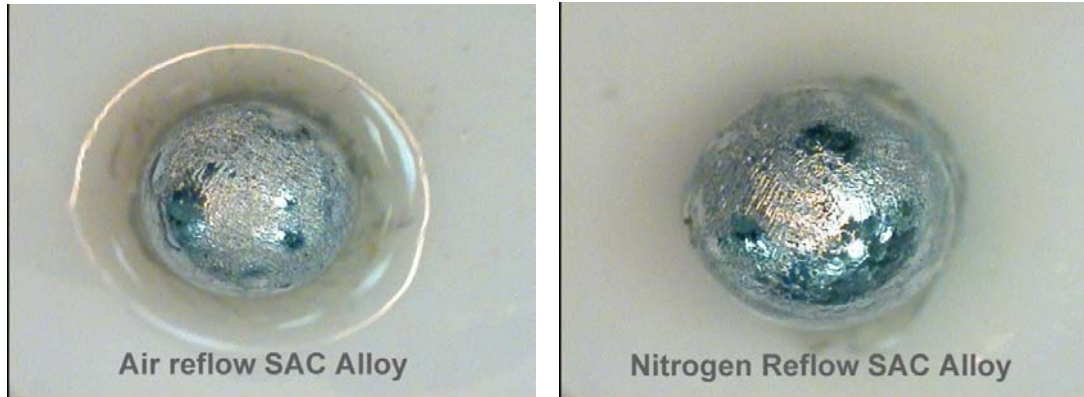


Solder Ball test - Impact of nitrogen on Tin-Silver-Copper solder surface finish

It is important to note that chemistry can at times impact the surface finish in a positive way as can be seen in the photographs shown below. Both solder joints were formed in air reflow and are SAC alloy of the same composition. The difference in brightness was created by a solder paste flux with different resins, which protected the surface from the effects of air. The bright joints are obviously more comparable to a 63/37 process.

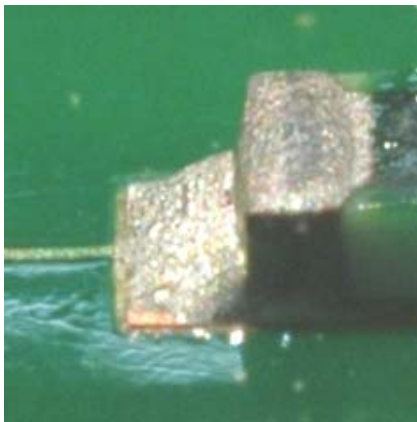

SAC in air, dull surface finish

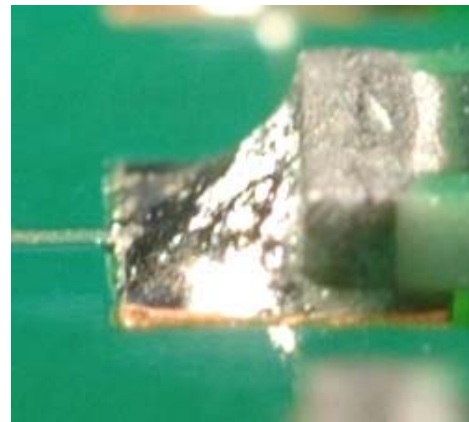

SAC in air, bright surface finish

Selecting the best lead-free solder paste for the SMT process will be a critical variable and the following can be used as a guide in the selection process. It is important for the process engineer to determine which attribute is most critical in the process.

- ❑ **Print speed**
- ❑ **Abandon time**
- ❑ **Stencil life**
- ❑ **Tack life**
- ❑ **Solder ball potential**
- ❑ **Slump, cold and hot**
- ❑ **Spread on various metallization**
- ❑ **Solderability on various finishes**
- ❑ **Reflow window**
- ❑ **Voiding potential**
- ❑ **Double reflow window capability**
- ❑ **Clean-ability, if water washable paste**
- ❑ **Pin-testability, if required in a no-clean paste**

It is not necessary to repeat the above tests in-house, good solder paste manufacturers will make the information available to the user. It is important to ask yourself several important questions in reference to your process requirements. These questions will help you define the solder paste best suited for your process.


Some of the questions, to better define the lead-free solder paste are:

- ❑ Which solder alloy and powder diameter will you use?
- ❑ Are you going to need water washable or no-clean solder paste chemistry?
- ❑ What are the finishes you are soldering?
- ❑ Are you going to use nitrogen reflow or air?
- ❑ Are you doing double-sided SMT?
- ❑ If a no-clean paste will be used, which IPC classification?
- ❑ If you use water washable pastes, how cleanable is the flux residue?
- ❑ Do you need a paste with a wide print process window, tack life, stencil life, etc?

If the paste is selected carefully and the SMT process optimized to suit the chosen chemistry, the lead-free transition will be achievable without jeopardizing reliability and product yields. Sometimes a solder paste is selected which does not fit the process, high speed printing may not be a necessity, a paste which will perform at lower peak temperatures not required. **Solder paste formulation is all about creating certain attributes at the expense of others.**

Common soldering defects associated with lead-free are:


- ❑ Off-pad solder balling
- ❑ Mid-chip solder balling
- ❑ Tomb-stoning
- ❑ Bridging (shorts) on fine pitch QFP leads
- ❑ Open joints
- ❑ Non-Wetting
- ❑ De-Wetting
- ❑ Cold solder joints
- ❑ Voids
- ❑ Excessive dullness or surface cracks

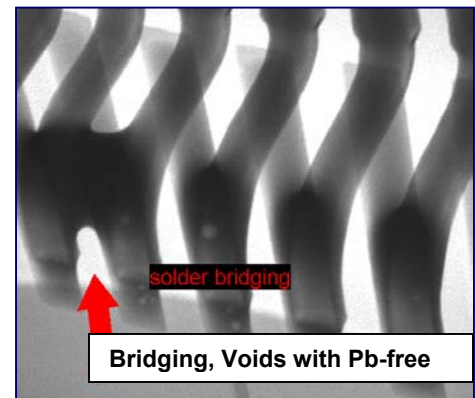


These defects can be avoided in a properly optimized process with a lead-free solder paste designed to give adequate wetting, low slumping, and low voiding with lead-free alloys. Good activity at higher reflow temperatures will be had by choosing solder pastes with activator packages, which do not decompose before at 217 °C.

Lead-free solders due to their reduced wetting speeds will at times not completely solder the pads. This will be impacted by the flux activity, thermal profile used, board finish and the reflow atmosphere.

However some assemblers are modifying the stencil as to have less aperture reduction. This requires a solder paste with excellent hot slump properties to avoid bridging, solder balls and mid-chip balling.

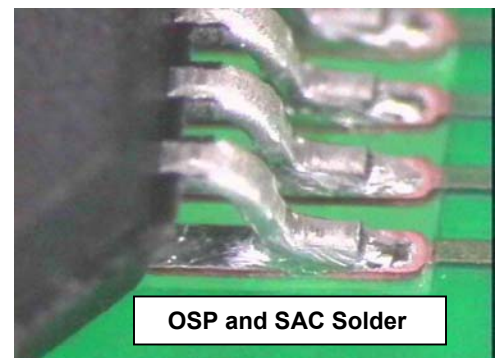


Other assemblers are seeking modifications to pad design. In most cases this is not considered an issue.

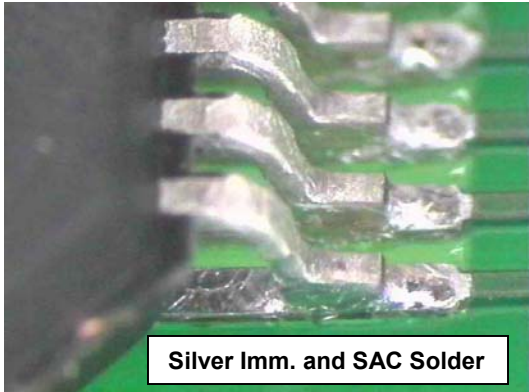


In reference to solderability, SAC alloys will wet the metallization at substantially reduced rates when compared to 63/37. Solderability is impacted at both the speed of wetting and the degree of spread.

Pure tin finishes are the easiest to solder with SAC alloys. While bare copper OSP usually gives the poorest results especially on assemblies that have seen a previous thermal process. Silver Imm. and NiAu finishes give values between tin and copper, and are popular lead-free choices.

Solder paste selection will also impact the self-alignment characteristic of components. Lead-free alloys do tend to have a reduced self-alignment benefit because of the differing surface tensions of lead-free alloys. A properly formulated flux chemistry will help in reducing self-alignment issues, as can be seen in the SAC lead-free paste below.

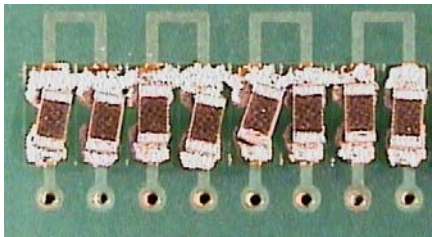

Components before reflow

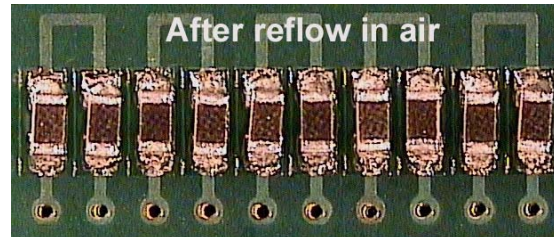

Components after reflow

In reference to component finish compatibility and the use of leaded component terminations with lead-free solders, studies are still ongoing. Some OEM'S have found little impact to their products reliability when leaded terminations are soldered with SAC alloys. The Gintic Consortium, recent work on lead-free wave assembly, did report that the best results were obtained with lead-free components such as pure tin and copper tin. These finishes had fewer failures during flex testing using various thermal profiles and resulted in less solder cracks.

Solder joints containing bismuth such as using SnAgBiCu lead-free paste to solder lead bearing terminations is not recommended. High temperature storage at 1000 hours at 150°C resulted in more solder joint cracks.

As lead-free is implemented in an organization, both leaded and lead-free solders will be used. It is important to maintain good traceability of components, boards and solder products.

To assist the industry, component suppliers have started to adopt the new standard, JESD97, "Marking, Symbols, and Labels for the Identification of Lead-free Assemblies, Components and Devices".

To avoid confusion with solder products, some manufacturers



have adopted different colours and shapes for the packaging of lead-free soldering materials.

Training of all personnel will be required not only at the final inspection level but also at incoming inspection, inventory control and at BOM levels. Good traceability of all components and boards, including solder materials will be required.

Other processes requiring attention are the hand soldering and rework processes. Although the lead-free solder spools may be packaged with different colours, the soldering irons used to solder lead-free parts must also be identified as to avoid cross contamination with leaded solder, which may also be used in close proximity. A simple way to do this is to label the soldering iron with a label stating "lead-free" and also applying fluorescent green tap on the handle.

### **Conclusion:**

Developing a lead-free SMT process requires good planning and a close working relationship with all suppliers. Understanding the components and board compatibility issues with the use of higher temperatures is essential. Also important is the avoidance of certain elements such as bismuth and lead, which may impact solder joint reliability.

Solder paste alloy must be selected and then a compatible flux system to meet the solderability requirements of the finishes to be soldered is needed. The reflow process will need optimization to warrant good intermetallic bonding, while avoiding temperature excesses, as to prevent board delamination, component damage, excessive intermetallic growth, solder surface and flux residue effects.

Rigorous material controls will be essential. A team approach and proper training will be required for lead-free integration, especially where dual systems, leaded and lead-free are present.

### **About the author:**

Peter Biocca is Senior Market Development Engineer with Kester in DesPlaines, Illinois. He is a chemist with 23 years experience in soldering technologies. He has presented around the world in matters relating to process optimization and assembly. He has been working with lead-free for over 8 years, involved in numerous national and global consortia within this time; he has assisted many companies implement lead-free successfully.

He is an active member of IPC, SMTA, IMAPS and ASM. He is the author of over a hundred technical papers delivered globally. He is also a Certified SMT Process Engineer.

**For further information please contact Peter Biocca at Kester, telephone 972.390.1197 or via email at [pbiocca@kester.com](mailto:pbiocca@kester.com)**